

# Chocolate Fix Pillow

Created By: Alba Fekete, Educator



It's time to get your creative fix. It's just as satisfying and has a lot less calories! Learn how to combine several designs and, most importantly, how to put it all together flawlessly using Janome's easy to use App, AcuSetter. Border designs can be found at [www.janome-embroidery.com](http://www.janome-embroidery.com), as well as hundreds more, so that you can make your own rich, decadent, chocolatey good creation!

**Time:** 6 Hours

**Skill Level:** Confident Beginner

## Janome Supplies Required:

- Horizon Memory Craft 15000
- IPad with AcuSetter installed
- SQ23 Hoop with Magnets
- AcuGuide
- Purple Tip Needles
- Two Janome Prewound Bobbins

## Fabric/Notions Required:

- 30"x30" fabric for pillow top
- 30"x30" Batting for pillow top
- 2- 21"x16" fabric for pillow back
- Rotary cutter/ruler/mat
- Basic sewing supplies
- 20" pillow form
- Embroidery thread for Border and Wording
- All-purpose thread to match the pillow fabric
- Embroidery Perfection Tape (optional)


## Embroidery Designs Required:

- Designs 12380-01 and 12380-02 from [www.janome-embroidery.com](http://www.janome-embroidery.com)
- Chocolate design (provided)
- Template for designs

## Sewing Instructions:

### Embroidery


1. Set up the HMC15000 for Embroidery, threading with a prewound bobbin and embroidery thread in the border color and using a purple tip needle.
2. Place pillow top fabric and batting together with right sides up.
3. Position the templates on the fabric for the pillow border.

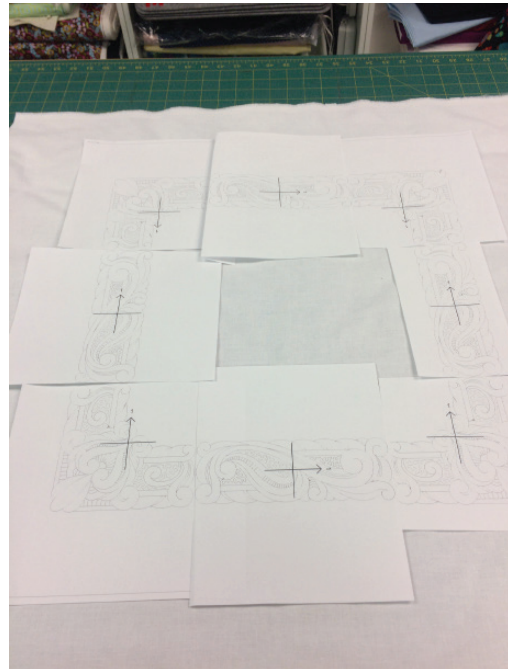


# Chocolate Fix Pillow

Created By: Alba Fekete, Educator

4. Pin or tape in place one of the corner design templates.

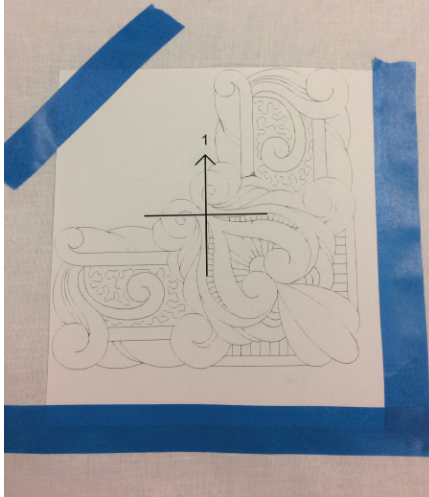


5. Hoop the fabric and template in the SQ23 Hoop, using the magnets to further secure the fabric and batting.

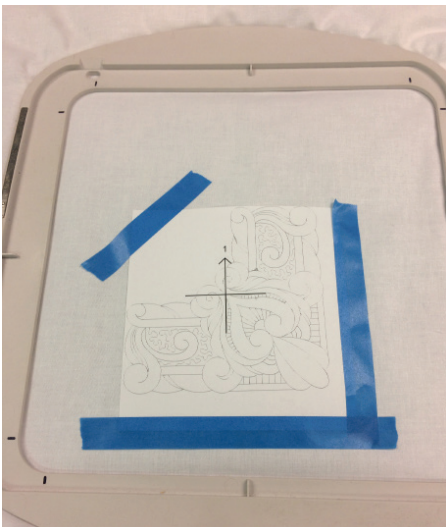

6. Prepare the HMC15000 and the iPad to be connected to your wireless network.
7. Open the design 12389-02 Fancy Quilting Corner, answering any pop-up messages on the Ready to Sew screen.
8. Open the AcuSetter app and select the HMC15000.
9. Select Receive to send the design from the machine to the App.

10. Maneuver the iPad into a horizontal position over the SQ23 Hoop until the center of the target turns green and take a photo.
11. Match the embroidery hoop marks at each of the eight marks.

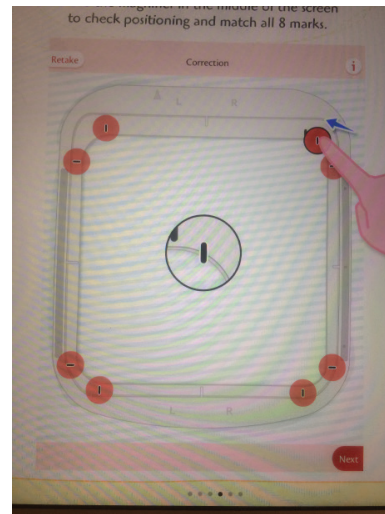

12. Match the design over the template to ensure proper placement.
13. Once the design placement is established select Send to transfer the corrected position to the machine.
14. Embroider the first corner design.
15. Remove hoop from the machine and re-hoop the pillow top so that 2" of the corner design is visible in the hoop.



# Chocolate Fix Pillow

Created By: Alba Fekete, Educator

16. Open design 12380-01 on the HMC15000.
17. Repeat steps 7-10.
18. Match the border design to the embroidered corner using the design editing function on the AcuSetter App. Once the placement is finalized, send the design to the machine.
19. Embroider the side border design.



20. This process will be repeated until the border is completed.
21. Mark the center of the border and Hoop in the SQ23 hoop.
22. Open and embroider the Chocolate design.
23. Square up the pillow top to 21" x 21".




## Pillow Construction

1. Set up the HMC15000 for sewing mode, threading with all-purpose thread to match your pillow fabric. Attach the AcuGuide, setting it for a 1 inch seam allowance.



2. Sew a guide line on a single layer of the backing pillow fabric along the 21" side. This will be used as a guide for a double rolled hem.
3. Fold and press along the stitched guideline to form a 1 inch hem to the wrong side of the fabric.

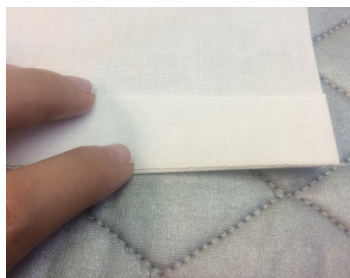


4. Fold over the hem again forming a double fold hem.




# Chocolate Fix Pillow

Created By: Alba Fekete, Educator

5. Change the Cloth Guide setting to 7/8 inch.

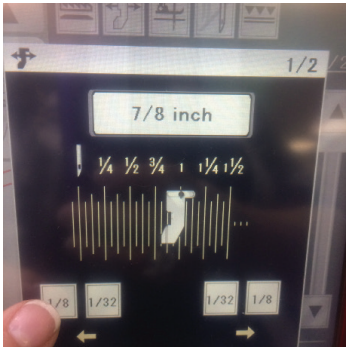

6. With the right side up, sew the hem.

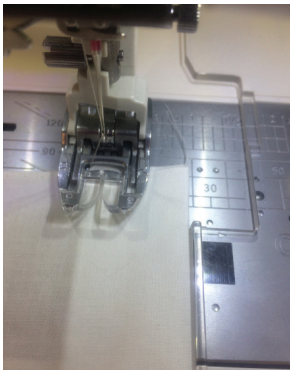

7. Repeat steps 1-5 on the second piece of pillow back fabric.

8. Place the pillow back pieces right side to right side on the pillow top, leaving the hemmed sections in the center with an overlap.



9. Pin in place.
10. Change the AcuGuide to 1/2 inch.
11. Sew all four sides of the pillow backtacking at the corners and the overlapped areas.
12. Clip corners and turn inside out.
13. Insert the pillow form and enjoy!

